



Ermittlung der Frontbreite How to find the width of the front

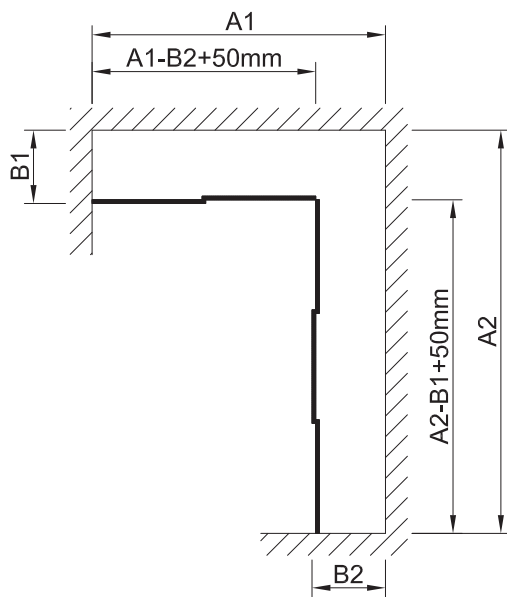

- A1 = Schrankbreite
width of wardrobe
- A2 = Schrankbreite
width of wardrobe
- B1 = Schranktiefe ab Vorderkante Deckenschiene
depth from front edge of top track
- B2 = Schranktiefe ab Vorderkante Deckenschiene
depth from front edge of top track

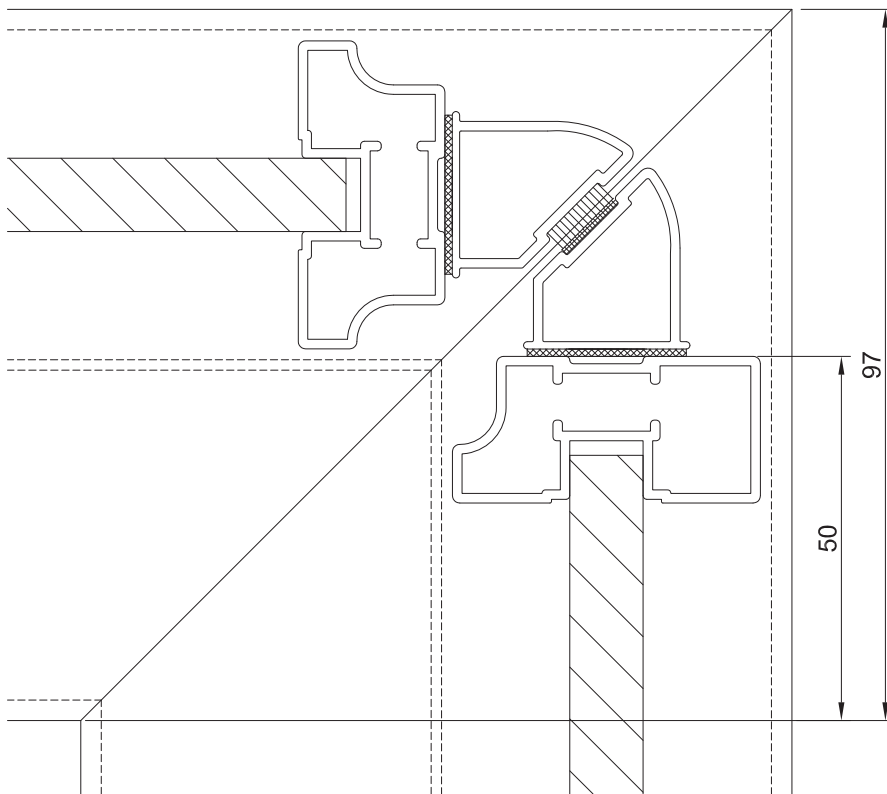

S1500

4.03.5.abc

12/2012



Schutzvermerk ISO 16016 beachten

Weitergabe sowie Vervielfältigung dieses Dokumentes, Verwertung und Mitteilung seines Inhaltes sind verboten – soweit nicht ausdrücklich gestattet. Zuwiderhandlungen verpflichten zu Schadensersatz. Alle Rechte für den Fall der Patent-, Gebrauchsmuster- oder Geschmacksmustereintragung vorbehalten.

The safety notice ISO 16016 is to be observed

The distribution and copying of this document, as well as the exploitation and announcement of its contents are forbidden – if not expressly allowed. Breaches are subject to indemnification. All rights reserves in case of registration of patent, copyright or design.

Ansicht: Gleittür / Horizontalschnitt / Ecklösung 90° / hinterer Lauf

Illustration: sliding door / horizontal section / corner solution 90° / rear side

raumplus