



Ermittlung der Frontbreite How to find the width of the front

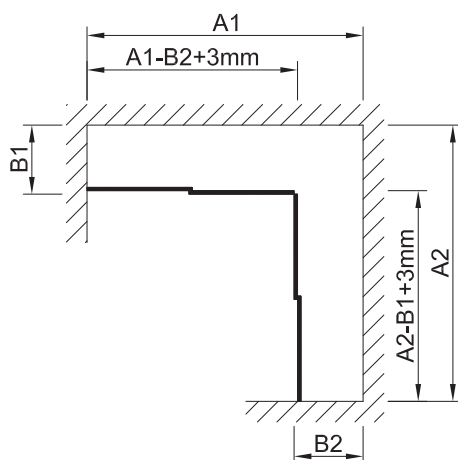

- A1 = Schrankbreite
width of wardrobe
- A2 = Schrankbreite
width of wardrobe
- B1 = Schranktiefe ab Vorderkante Deckenschiene
depth from front edge of top track
- B2 = Schranktiefe ab Vorderkante Deckenschiene
depth from front edge of top track

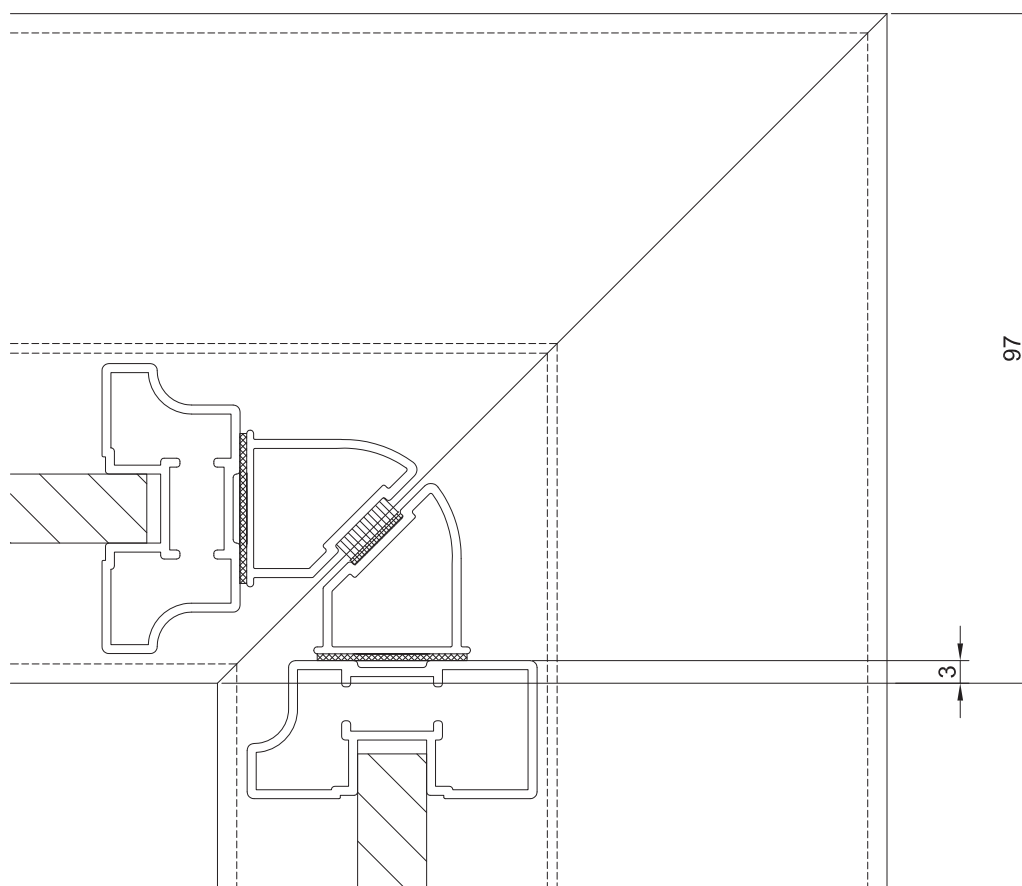

S1500	4.03.5.abc	12/2012	©	Schutzvermerk ISO 16016 beachten Weitergabe sowie Vervielfältigung dieses Dokumentes, Verwertung und Mitteilung seines Inhaltes sind verboten – soweit nicht ausdrücklich gestattet. Zuwiderhandlungen verpflichten zu Schadensersatz. Alle Rechte für den Fall der Patent-, Gebrauchsmuster- oder Geschmacksmusterrechten vorbehalten.	The safety notice ISO 16016 is to be observed The distribution and copying of this document, as well as the exploitation and announcement of its contents are forbidden – if not expressly allowed. Breaches are subject to indemnification. All rights reserves in case of registration of patent, copyright or design.
Ansicht: Gleittür / Horizontalschnitt / Ecklösung 90° / vorderer Lauf Illustration: sliding door / horizontal section / corner solution 90° / front side					

raumplus