



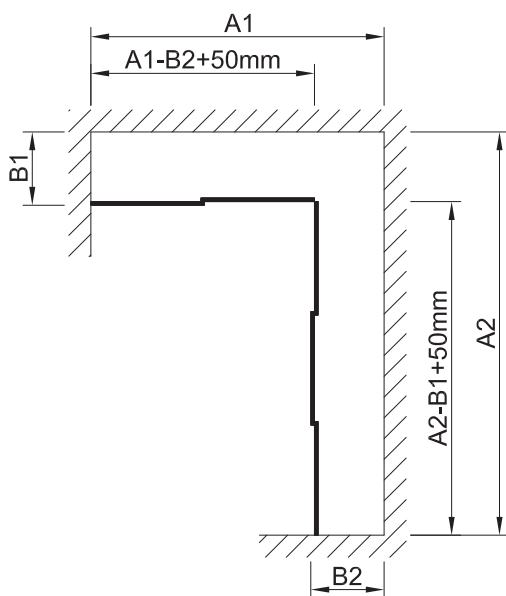

Ermittlung der Frontbreite How to find the width of the front

A1=Schranksbreite / width of wardrobe
 A2=Schranksbreite / width of wardrobe
 B1=Schranksbreite ab Vorderkante Deckenschiene
 depth from front edge of top track
 B2=Schranksbreite ab Vorderkante Deckenschiene
 depth from front edge of top track

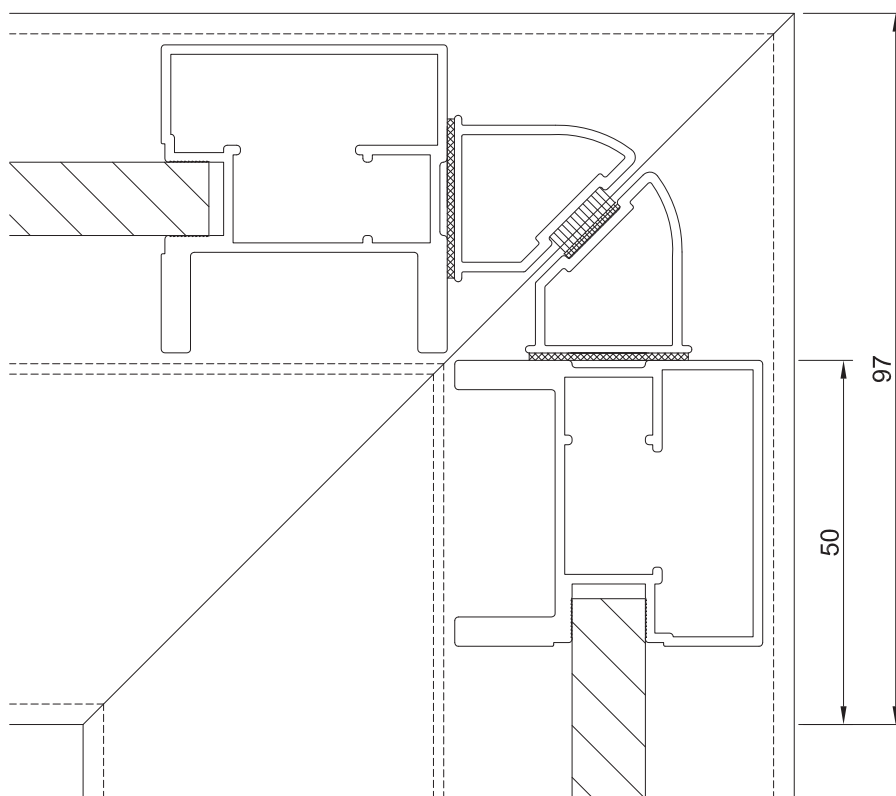

S3000	4.03.5.abc	12/2012	©	Schutzvermerk ISO 16016 beachten Weitergabe sowie Vervielfältigung dieses Dokumentes, Verwertung und Mitteilung seines Inhaltes sind verboten – soweit nicht ausdrücklich gestattet. Zuwiderhandlungen verpflichten zu Schadensersatz. Alle Rechte für den Fall der Patent-, Gebrauchsmuster- oder Geschmacksmustereintragung vorbehalten.	The safety notice ISO 16016 is to be observed The distribution and copying of this document, as well as the exploitation and announcement of its contents are forbidden – if not expressly allowed. Breaches are subject to indemnification. All rights reserves in case of registration of patent, copyright or design.
Ansicht: Gleittür / Ecklösung 90° / hinterer Lauf Illustration: sliding door / corner solution 90° / rear side					raumplus